 


Konic

USER'S MANUAL LED TV SET

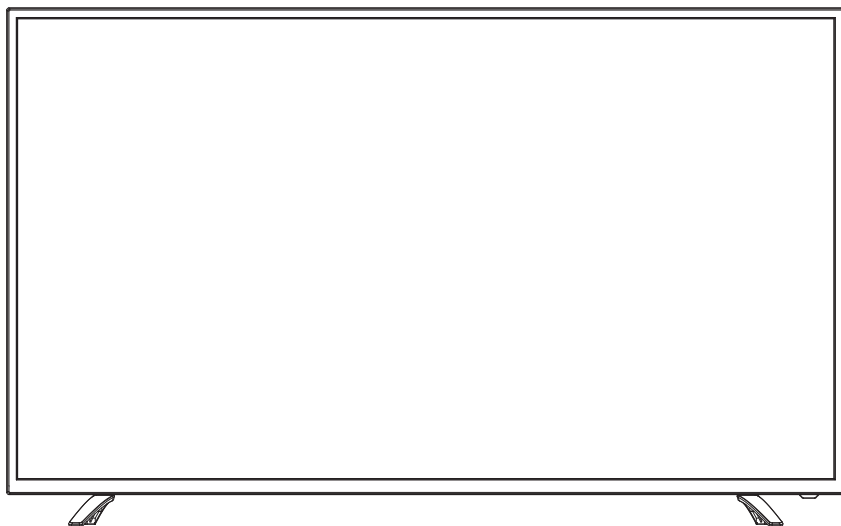

KUD55VT682AS
KUD58VT681AS
KUD65VT682AS
KUD75VT685AS

Contents

- **Introduction**
- **Warning**
- **Caution**
- **Main Unit Description**
- **Remote Control**
- **Basic Operation**
- **Menu system instruction**
- **Digital Media Player**
- **Specification**
- **Trouble Shooting**

Introduction

Thank you very much for your purchase of our product of LED TV. It serves as a normal color TV and PC monitor. To enjoy your TV to the full from the very beginning, read this manual carefully and keep it handy for ready reference.

INSTALLATION

- ① Locate the TV in a room where direct light does not strike the screen. Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.
- ② Allow enough space between the receiver and the wall to permit ventilation.
- ③ Avoid excessively warm locations to prevent possible damage to the cabinet or premature component failure.
- ④ Do not install the TV in a location near heat sources such as radiator, air ducts, direct sunlight, or in a place somewhere like close compartment and close area. Do not cover the ventilation openings when using the TV.
- ⑤ The indicator light will last about 30 seconds to go out after cutting off the electricity, during this period, you cannot repower it on until the indicator light goes out, thanks a lot for your attention!

Warning



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO AVOID THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER- SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to avoid the risk of electric shock, do not disassemble this equipment by anyone except a qualified service personnel.



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the equipment.

 
WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:


- a) –Using cabinets or stands recommended by the manufacturer of the television set.
- b) – Only using furniture that can safely support the television set.
- c) – Ensuring the television set is not overhanging the edge of the supporting furniture.
- d) – Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- e) – Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- f) – Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.


Quick installation guide

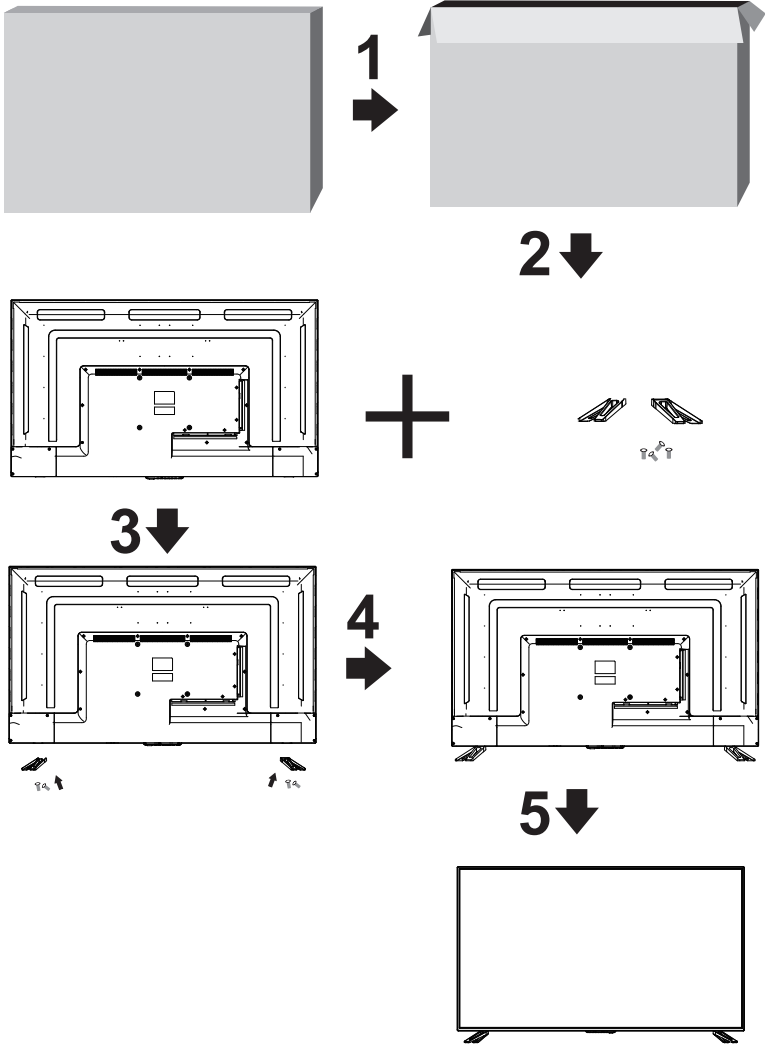


Caution

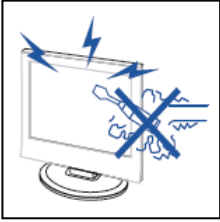 

 
High voltages are used in the operation of this product.
Do not open the product's casing. Refer servicing to qualified service personnel .

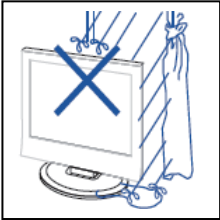

 To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture, do not place objects filled with liquids, such as vases, on the apparatus.

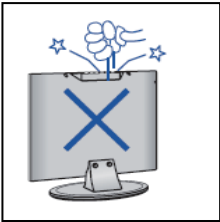


 Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

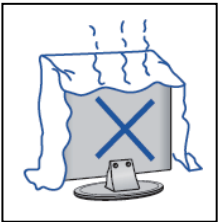


Avoid exposing the main unit to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat. E. g. video cassette players, Audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent failure of electrical component. Do not squash power supply cord under the main unit or other heavy objects.

 Caution

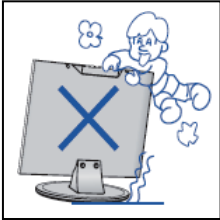


Caution

 Never stand on, lean on, push suddenly the product or its stand. You should Pay special attention to children.

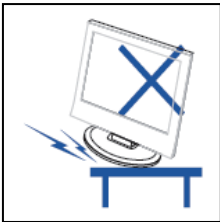

Caution

 Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it should fall.

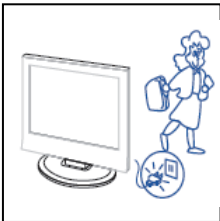

Caution

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



Caution

 
The LED panel used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the LED panel breaks.

Main unit description

Control Panel Button Function

INPUT : Select the input signal.
MENU : Press to select the main menu.
CH+ : TV channel up.
CH- : TV channel down.
VOL+ : Volume up.
VOL- : Volume down.
POWER : Turn the TV on or off.

TV Terminal Connections

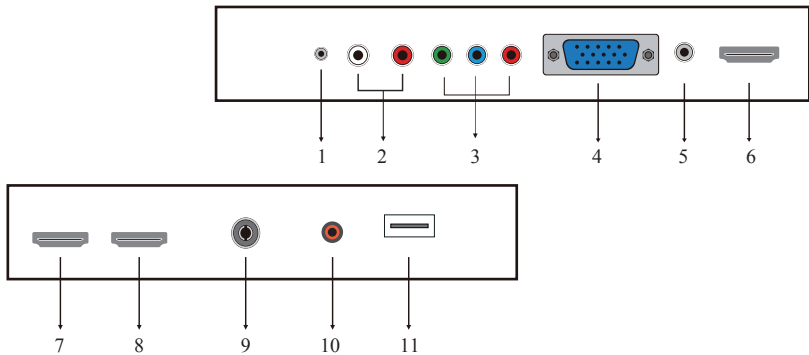

1. HEADPHONE output terminal.
2. AV&YPbPr AUDIO input terminal
3. VIDEO/ YPbPr input terminal.
4. VGA input terminal.
5. PC AUDIO input terminal.
6. HDMI 1 input terminal.
- 7 HDMI 2 input terminal.
8. HDMI 3 input terminal.
- 9 RF Input.
10. Coax Digital output to AV receiver.
11. USB input terminal.

Remote control



- **【POWER】**
Turns the TV on (standby) and off .
- **【 INPUT 】**
INPUT mode conversion button
- **【 NICAM/A2 】**
TV Nicam/A2 select.
- **【 ASPECT 】**
Select different size.
- **【P.MODE】**
Select the different picture mode directly.
- **【S.MODE】**
Select the different sound mode directly.
- **【 NUMBER (0-9)】**
Press these button to enter digits These buttons for direct access to use a channel to enter channel number for both ATV and DTV or enter password for Parental lock .
- **【 -/--】**
Press to change the channel bit.
- **【RECALL】**
Switch back and front between the current and previous channels.
- **【 FAV 】**
Favourite program channel button.
- **【 FREEZE 】**
To freeze current picture.
- **【TV/RADIO】**
Press to switch between DTV and radio programs
- **【RED, GREEN, YELLOW, CYAN】**
Used to select the corresponding coloured items on the screen during DTV mode.
- **【SLEEP】**
Set the sleep timer.
- **【EPG】**
Press to display EPG information(Electronic Program Guide).
- **【 ▲/▼/◀/▶ / OK 】**
Allow you to navigate the on-screen menus and adjust the system settings to your preference.
- **【 MENU】**
Display the OSD menu(on screen display).
- **【EXIT】**
Press EXIT to exit menu of sub menu
- **【DISPLAY】**
Press this button to display the information on current input

Remote control



- **【MUTE】**
Switches the sound on or off.
- **【VOL+/VOL-】**
Adjust the volume.
- **【CH+/CH-】**
Change the channel.

 
- **【▶▶】**
▶▶: Press this button to PLAY or PAUSE.
- **【■】**
Stop the disc.
- **【◀◀】 【▶▶】**
Play fast backward/forward.(MEDIA/DVD)
- **【◀◀】 【▶▶】**
Play previous/next media file.(MEDIA/DVD)
- **【HOLD】**
HOLD On or Off the current page display in Teletext mode
- **【REVEAL】**
Reveal or Hide the hidden words.
- **【SIZE】**
Change the size of display in Teletext mode
- **【INDEX】**
Press to return to the index/initial page.
- **【S.PAGE】**
Display a sub-page of upper options.
- **【TTX】**
Press to turn the Teletext On and Off.
- **【T. SHIFT】**
Press the button to pause current DTV program and start recording.
- **【AUDIO】**
Select Audio mode
- **【SUBTITLE】**
Select subtitle language(DVD)
- **【REC】**
Press to record the program immediately.
- **【PVR】**
PVR List

Basic Operation

Menu system instruction

Hotel Menu

1. Press SOURCE key and then press the number keys "3690" to display the Hotel Menu.
2. Press ▲/▼ key to select options

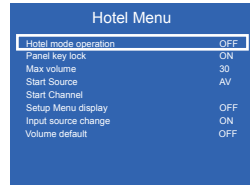


Picture

1. Press MENU key to display the main menu on the screen.
2. Press ◀/▶ key to select "Picture" option.
3. You can also press the PMODE key on the remote control to select one of the picture settings.

Picture Mode

Your TV has five picture settings (Standard, Soft, user, Dynamic) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness, Tint .

 1. Press ◀/▶ key to select one picture mode.
2. Press ▲/▼ key to select "Picture Mode" option and press OK button to enter sub-menu.

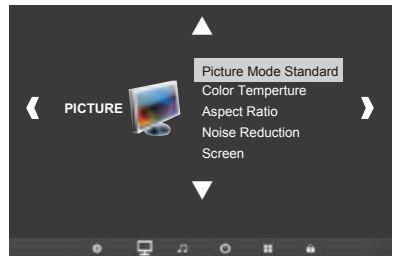

Picture

Standard: Selects the picture for optimum display in a normal environment.

Soft: Selects the picture for comfortable display in a dark room.

User: Select to view your favorite display settings (see User settings for PICTURE).

Dynamic: Selects the picture for high-definition in a bright room.

Menu system instruction

User settings for PICTURE (Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press the **OK** key and then press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

Contrast: Adjusts the lightness and darkness between objects and the background.

Brightness: Adjusts the brightness of the picture.

Color: Adjusts the colors, making them lighter or darker.

Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.

Tint: Adjusts the color of objects, making them more red or green for a more natural look.

Tint can only be adjusted when signal is NTSC.

Adjusting the Color Temperature

You can change the color of the entire screen according to your preference.

1. Press ▲/▼ key to select "Color Temperature" option.
2. Press the **OK** key and then press ◀/▶ key to select one color temp.

Medium: Keeps whites white.

Warm: Makes whites reddish.

User: You can only adjust the color components.

Cool: Makes whites bluish.

Aspect Ratio Full

Selects the aspect ratio,Auto/Full/4:3/Just scan

Noise Reduction

Selects the noise reduction level,Off / Low / Middle / High.

 
Screen (VGA mode)

Screen is available in VGA mode only. You can adjust horizontal position, vertical position, size and phase here.

Menu system instruction

Sound

1. Press **MENU** key to display the main menu on the screen.
2. Press **◀/▶** key to select "Sound" option.
3. You can also press the **SOUND** key on the remote control to select one of the sound settings.

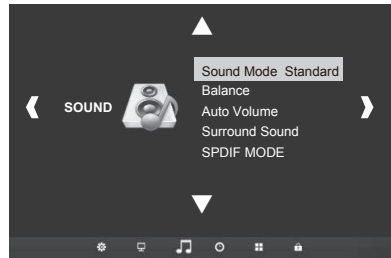

Sound Mode

You can select the type of special sound settings to be used when watching a given broadcast.

Your TV has five sound settings (" Standard " , " Music " , " Movie " , " Sports " , " User ") that are preset at the factory.

1. Press **▲/▼** key to select "Sound Mode" option.
2. Press the **OK** key and then press **◀/▶** key to select one sound mode.

Standard: Selects the normal sound mode.
Music: Provides clear and live sound for news.
Movie: Provides live and full sound for movies.
Sports: Emphasizes bass over other sounds.
User: Selects your custom sound settings (See "User settings for Sound").

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press **▲/▼** key to select "Balance" option.
2. Press the **OK** key and then press **◀/▶** key to decrease or increase the value of the item.

Auto Volume

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. " Auto Volume " automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press **▲/▼** key to select "Auto Volume" option.
2. Press **OK** key to select "On" or "Off".

Surround Sound

This is used to select "Surround Sound" .

1. Press **▲/▼** key to select "Surround Sound" option.
2. Press the **OK** key and then press **▲/▼** key to select "Surround" , or "Off" .

SPDIF Mode

This is used to select "SPDIF Mode" .

1. Press **▲/▼** key to select "SPDIF Mode" option.
2. Press the **OK** key and then press **▲/▼** key to select "Auto" , "PCM" or "Off" .

Menu system instruction

Channel

1. Press **MENU** key to display the main menu on the screen.
2. Press **◀/▶** key to select "Channel" option.

 
Auto Tuning

Press **▼ / ▲** key to select Auto Tuning, then press **OK** key to enter and select tuner type.



NOTE:

If you want to exit the Auto tuning, you can press **MENU** button, then a confirmation message will appear on the screen.

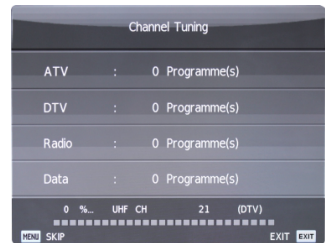

ATV Manual Tuning

In the ATV source, you can choose “ATV Manual Tuning” to enter “ATV Manual Tuning” menu.

Storage To: Press **◀/▶** button to store your favorite channel to the appointed channel number

 
Sound System: Select the “SoundSystem” option, press **◀/▶** on the remote control or TV. The sound system will be changed repeatedly in the below order. BG→J→DK

Current CH: You can see the current channel number and you can press **◀/▶** button to choose the channel you want to modify.

Search: you can use **◀/▶** button to search channels from low frequency to high frequency and use **◀/▶** button to search channels from high frequency to low frequency.

When you have searched a channel, the searching will be paused and you can press it again for other channels after you store the channel.

Fine Tune: In case of unfavorable image or sound of TV program, you can use “Fine Tune”.

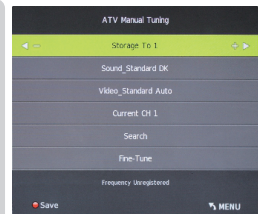


Menu system instruction

Channel

DTV Manual Tuning

In the DTV source, you can choose “DTV Manual Tuning” to enter “DTV Manual Tuning” menu.

 You can use ◀/▶ button to choose the channel number and press **OK** button to enter searching, and then the TV will store the DTV channel if there is a DTV signal present.

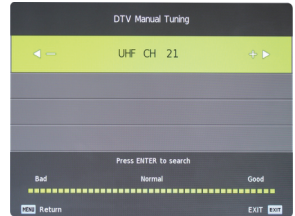

Program Edit

You can use ▲/▼ button to choose “Program Edit” and enter the menu, press the Red/Green/Yellow/Blue color button on the remote control to delete, rename, move and skip programs, also you can press FAV button to add to your favorite list.

 
Delete: You can press RED button to enter "Delete" menu, then choose the channel you want to delete and press RED button again to delete.

Rename(green): Rename some program from program list in ATV mode you want to Rename. Press ▲/▼ button to select the program that need to be renamed, then press green button into rename state, and press ◀/▶ button to select the letter that need to be edited, and press ▲/▼ button to select a new letter, repeat to rename the program.

Move: You can press ▲/▼ button to choose the channel in ATV mode you want to move and press YELLOW button to move it.

Skip: You can press ▲/▼ button to choose the channel you want to skip and press BLUE button to skip it when you change channels.

FAV: If you like the program of a channel, you can choose “FAV” button in the menu to add it to your favorite list and later you can press “FAV” button in the remote control to choose your favorite programs as soon as possible.

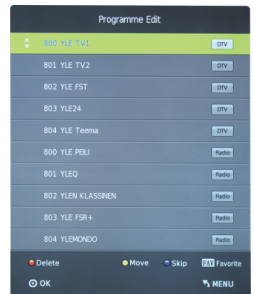

Signal Information(Used only in DTV)

1. Press ▲/▼ key to select "Signal Information" option.
2. Press “**OK**” key ,you can see the information of the DTV channel.

 
NOTE: Signal Quality/Signal Strength (DTV Only): Unlike analogue channels, which can vary in reception quality, digital channels must have perfect reception quality or you will not receive them at all. So, unlike analogue channels, you are not able fine tune a digital channel. If the signal strength indicates that the signal is weak, a possible solution is to adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.



Menu system instruction

Time

1. Press **MENU** key to display the main menu on the screen.
2. Press **◀/▶** key to select "Time" option.

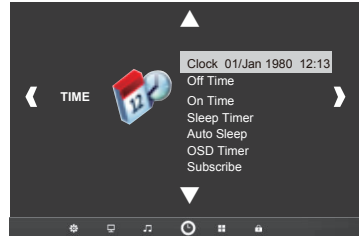


Clock

You can modify the time of your TV set, but when you switch to DTV program, the "Clock" is decided by the signal from your antenna.

Off/On Time

In "Off Time" item, press **OK** button to enter the submenu, set the time to turn off the TV set.

 In "On Time" item, press **OK** button to enter the submenu, set the time to turn on the TV set,

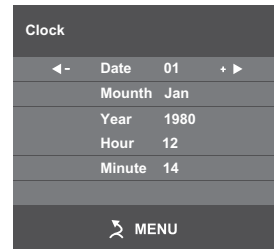


Sleep Timer

1. Press **▲/▼** key to select "Sleep Timer" option, then press the **OK** to enter the sub-menu.
2. Press **▲/▼** key repeatedly until the desired time appears (Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).


Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

 Notes: When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

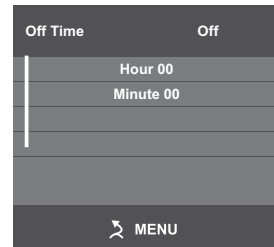

Auto Sleep

 1. Press **▲/▼** key to select " Auto Sleep " option, then press the **OK** to enter the sub-menu.
2. Press **▲/▼** key repeatedly until the desired time appears (Never, 4Hours, 6Hours ,8Hours).

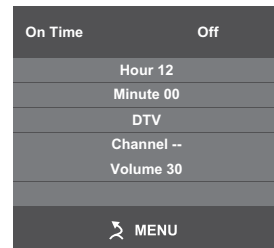

OSD Time

Press **▼ / ▲** button to select OSD Timer, then press **OK** button to enter sub-menu.

Press **▼ / ▲** button to select.(Available options are:Off 5S, 10S, 20S, 30S).

Menu system instruction

Subscribe

 
1. Press ▲/▼ key to select "Subscribe" option.
2. Press **OK** key to display the "PROGRAMME GUIDE TIME" setting menu.



OSD Language

You can modify the OSD set to suit your user preferences.

1. Press ▲/▼ key to select "OSD Language" option.
2. Press **OK** key to display the OSD setting menu.
OSD Language: select the proper language.

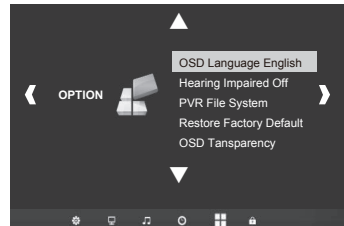


Hearing Impaired

Specific Hearing Impaired subtitles can be activated subject to availability from broadcaster.

Note: Only available in DTV mode.

PVR File System

 1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select "PVR File System" option.
3. Press **OK** key to enter "PVR File System" submenu

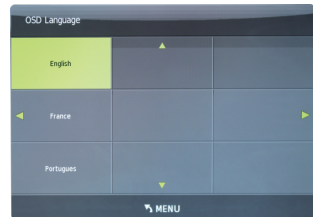

Restore Factory Default

Select the "Restore Factory Default" option and press **OK** key to display a confirm box, and select "Yes" or "No".

Note: Please use the "Restore Factory Default" option with caution as it will return all settings and channel memories to factory default.

OSD Transparency

Press ▼ / ▲ button to select OSD Transparency, then press **OK** button to enter sub-menu. Press ▼ / ▲ button to select. (Available options are: Off, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90%, 100%).

Menu system instruction

 
Lock

The lock feature requires a Password to be entered before any settings can be changed.

1. Press **MENU** key to display the main menu on the screen.
2. Press **◀/▶** key and select "Lock" under the "Option" menu.

Lock System

Press **OK** key to enter " Lock System " submenu, "Enter Password" menu will appear, enter password to enter "Lock System " submenu (the default and universal password is 0000, the almighty password is 8899).

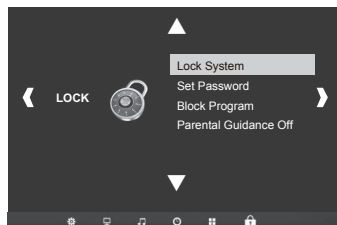


Set Password

1. Press **▲/▼** key to select "Set Password" option. then press the **OK** to enter the sub-menu.
2. Enter your 4-digit password to enter "Change Password" submenu. Choose any 4-digits for your new password and enter them. As soon as the 4 digits are entered, the cursor will skip to "Confirm Password" item, re-enter the same 4 digits, and your new password has been memorized.

Block Program

 1. Press **▲/▼** key to select "Block Program" option.
2. Press **OK** key to enter Block Program list. In the program list, use Green key to lock or unlock the program. Once the program is locked and Lock System is on, password is needed to enter it.

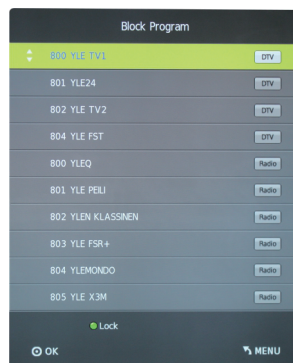

Parental Guidance

This option only used in DTV mode.

1. Press **▲/▼** key to select "Parental Guidance " option.
2. Press **OK** key to select the lock level of the Parental Guidance: NO BLOCK, G, PGR, AO, BLOCK ALL

Menu system instruction

PVR

PVR File System (DTV mode)

Allows you to select your preference in the PVR file system.

Before using Time Shift Function or recording function, it is necessary to first format the USB storage device. All the data in the USB storage device is deleted after format has done.

Time Shift Function

Please make sure the USB device is inserted and format is done. If not, a warning message will pop up.

1. During normal television viewing, you may press ◀/▶ button to virtually pause the live viewing broadcast program if you want to go out for a while.

2. When you have returned, press ▶|| button to play the missed broadcast program.

Select Disk	C:
Check PVR File System	Start
USB Disk	
Format	
Time Shift Size	
Speed	
Free Record Limit	6 Hr.
MENU	

Recording DTV Program

Play from a USB storage device

1. Press **REC** button to record the program that you are currently watching.
2. Press **■** button to stop recording.

Play Recorded Program You can play a recorded program from the recorded list or from a USB storage device.

Play from a USB storage device

1. Press **SOURCE** button on the television or **SOURCE** button on the remote control, then press ▲/▼ to select the USB mode and then press OK button to enter multimedia center.
2. Press ◀/▶ to select MOVIE and then press OK.
3. Press ◀/▶ to select your storage device and then press OK.
4. Press ▲/▼/◀/▶ buttons to select your recorded program and then press ▶|| button to view

Digital Media Player

1. Switch off the television before connecting any USB storage device.
2. Connect your USB storage device to the USB terminal of your television, and then switch on the television.
3. Press **SOURCE** button on the television or **SOURCE** button on the remote control, then press buttons to select the USB mode and then press OK button to enter multimedia center.

Note:

- The maximum supported storage space of the hard disk is 1 TB.
 - The file system only support FAT32 format.
 - If you want to record a DTV program, the transfer rate of the USB storage device must not be less than 5MB/s, otherwise the picture and sound of the program will be affected.
 - Disconnect the USB storage device if it is not in use.
- USB MULTIME

Viewing Photos

1. Press **SOURCE** button on the television or **SOURCE** button on the remote control, then press ▲/▼ buttons to select the USB mode and then press **OK** button to enter multimedia center.
2. Press ◀/▶ buttons to select PHOTO and then press **OK**.
3. Press ◀/▶ buttons to select your storage device and then press **OK**.
4. Press ▲/▼/◀/▶ buttons to select the picture folder and then press **OK**.
5. Press ▲/▼/◀/▶ buttons to select the specified picture, a preview window will pop up.
6. Press ▶|◀ button to view the picture in full screen.
7. Press **OK** or display button to display the function bar. Press ▶|◀ buttons and then **OK** button to select the function: Pause / Prev. / Next / Stop / Repeat All / Music / Playlist / Info. / Rotate clockwise / Rotate anti-clockwise / Zoom In / Zoom Out / Move View. Press ▼ button or EXIT button to exit the control bar.

Note:

If this folder also contains music files, you can set the background music. Supported photo formats:

- JPEG (JPEG format, files with the extension ".jpg")
- BMP (files with the extension ".bmp")
- PNG (files with the extension ".png")

Note: Some file formats in the above list may not be played back correctly.



Digital Media Player

Listening Music

1. Press **SOURCE** button on the television or **SOURCE** button on the remote control, then press **▲/▼** buttons to select the USB mode and then press **OK** button to enter multimedia center.

2. Press **◀/▶** buttons to select **MUSIC** and then press **OK** .

3. Press **◀/▶** buttons to select your storage device and then press **OK** .

4. Press **▲/▼/◀/▶** buttons to select the music folder and then press **OK** .

5. Press **▲/▼/◀/▶** buttons to select the specified music, a preview window will pop up.

6. Press **▶||** button to start to play.

7. Press **OK** button to display the function bar.

 
Press **◀/▶** buttons and then **OK** or display button to select the function; Pause / FB / FF / Prev. / Next / Stop / Repeat All / MUTE / Playlist / Info. / Goto Time.

Press **▼** button or **EXIT** button to exit the control bar.

Supported music formats:

- MP3 (files with the extension ".mp3")
- WAV (files with the extension ".wav")

Note: Some file formats in the above list may not be played back correctly.

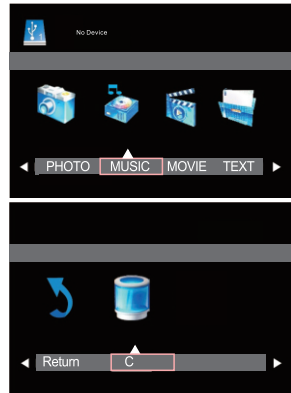

Digital Media Player

 
 
 
Viewing Movie

1. Press SOURCE button on the television or SOURCE button on the remote control, then press ▲/▼ buttons to select the USB mode and then press OK button to enter multimedia center.
2. Press ◀/▶ buttons to select MOVIE and then press OK .
3. Press ◀/▶ buttons to select your storage device and then press OK .
4. Press ▲/▼/◀/▶ buttons to select the movie folder and then press OK .
5. Press ▲/▼/◀/▶ buttons to select the specified movie, a preview window will pop up.
6. Press ► button to view the movie in full screen.
7. Press OK button to display the function bar. Press ◀/▶ buttons and then OK or display button to select the function: Pause / FB / FF / Prev. / Next / Stop / Repeat All / Set A / Playlist / Info. / Slow Forward / Step Forward / Goto Time / Zoom In / Zoom out / Aspect Ratio / Move View. Press ▼ button or EXIT button to exit the control bar.

Supported movie formats:

- AVI (files with the extension ".avi")
- MP4 (files with the extension ".mp4")
- TS (files with the extension ".ts")

Note: Some file formats in the above list may not be played back correctly.

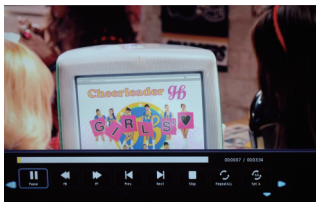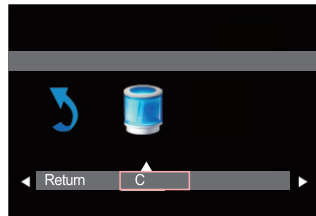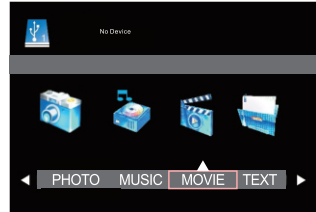

Digital Media Player

Viewing Text

 
1. Press **SOURCE** button on the television or **SOURCE** button on the remote control, then press ▲/▼ buttons to select the USB mode and then press **OK** button to enter multimedia center.
2. Press ◀/▶ buttons to select **TEXT** and then press **OK**.
3. Press ◀/▶ buttons to select your storage device and then press **OK**.
4. Press ▲/▼/◀/▶ buttons to select the text folder and then press **OK**.
5. Press ▲/▼/◀/▶ buttons to select the specified text, a preview window will pop up.
6. Press ▶▶ button to view the text in full screen.
7. Press **OK** button or **INFO** button to display the function bar. Press ◀/▶ buttons and then **OK** button to select the function: Prev. page / Next page / Prev / Next / Stop / Music / Playlist / Info. Press ▼ button or **EXIT** button to exit the control bar.

Note:

Only the traditional Chinese with Unicode format is supported.

Supported text formats:

- TEXT (files with the extension ".txt")

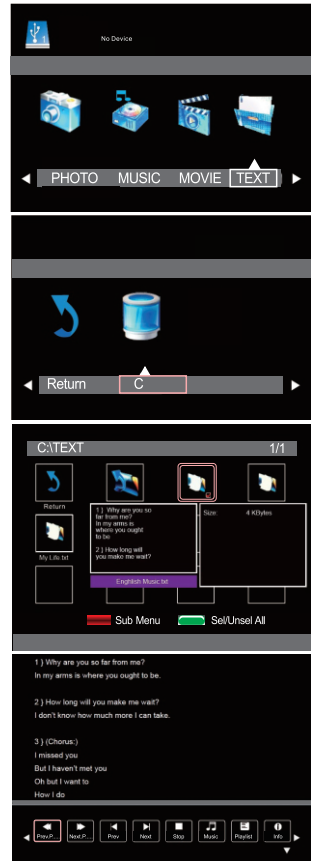

SPECIFICATIONS

Display panel	
Item	Illustration
Screen Size	55 inches
UHD resolution	16:9
Active Display Area	1209.6(H) × 680.4(V) mm
Max.of Pixels(Resolution)	UHD (3840 x 2160 pixels) resolution
Viewing Angle	Typical 178/178 Degree (Horizontal/Vertical)
Size With Stand	1243.7x281.9x766.4 mm
Size Without Stand	1243.7x92.5x722.3 mm
Rated power consumption	135W

Display panel	
Item	Illustration
Screen Size	58 inches
UHD resolution	16:9
Active Display Area	1270.08(H) × 721.44(V) mm
Max.of Pixels(Resolution)	UHD (3840 x 2160 pixels) resolution
Viewing Angle	Typical 178/178 Degree (Horizontal/Vertical)
Size With Stand	1299.5x253.7x821.5 mm
Size Without Stand	1299.5x83.8x759.3 mm
Rated power consumption	150W

SPECIFICATIONS

Display panel	
Item	Illustration
Screen Size	65 inches
UHD resolution	16:9
Active Display Area	1428.48(H)x803.52(V) mm
Max.of Pixels(Resolution)	UHD (3840 x 2160 pixels) resolution
Viewing Angle	Typical 178/178 Degree (Horizontal/Vertical)
Size With Stand	1461.0x285.1x904.4 mm
Size Without Stand	1461.0x85.5x843.0 mm
Rated power consumption	180W

Display panel	
Item	Illustration
Screen Size	75 inches
UHD resolution	16:9
Active Display Area	1428.48(H)x803.52(V) mm
Max.of Pixels(Resolution)	UHD (3840 x 2160 pixels) resolution
Viewing Angle	Typical 178/178 Degree (Horizontal/Vertical)
Size With Stand	1683.8x289x1028.2 mm
Size Without Stand	1683.8x71.3x965.3 mm
Rated power consumption	310W

Trouble Shooting

Before consulting service personnel, check the following chart for possible solutions.

PROBLEM	SOLUTION
TV will not turn on	<ul style="list-style-type: none"> ● Make sure the power cord is plugged in. ● The batteries in the remote control may be Exhausted; replace the batteries.
No picture, no sound	<ul style="list-style-type: none"> ● Check the cable between TV and antenna/external AV device. ● Press the power button on the remote. ● Press the SOURCE button the remote, then press the “▲/▼” button repeatedly to select the TV source.
Poor picture, sound OK	<ul style="list-style-type: none"> ● Check the cable between TV and antenna/external AV device. ● Try another channel, the station may have broadcast difficulties. ● Adjust the brightness/contrast in the Video menu. Check that the unit is set to PAL.
Audio noise	<ul style="list-style-type: none"> ● Move any infrared equipment away from the TV.

The TFT LED panel uses a panel consisting of sub pixels which requires sophisticated technology to produce. However, there may be a small number of bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

After-sale Service

In case any problem mostly like a fault occurs while your using LED TV ,please contact the store where you purchased this unit or the service agency.

In case any problem mostly like a fault occurs, please call konic Help Desk 0800666866 during weekdays from 9:00 a.m. to 5:30 p.m.

1. Quote your model and serial number, and provide full details of the alleged defect to our friendly staff.
2. Then you will be required to email or fix a copy of your original receipt for verification before we schedule your job as part of our In Standard Warranty Service.
3. Our staff will then provide you with a job number.
4. You will then need to make the product available to konic or authorized service agent for inspection or testing.
5. If such testing finds no defect in the product, you will be charged a No Fault Fee of \$65.00 to cover the cost of service work and testing.
6. The purchaser may bear the cost of the transport of the product to and from konic or the authorized repair agent to make the warranty claim.
 - a) TV size over 32" are "Pickup and Return warranty"
 - b) TV size less than 32" are "Return to Base warranty"

Service Contact Details:

Tel: 0800666866


Email: helpdesk@ncpgroup.co.nz



"HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."


Attaching the stand

 1. Attach the stand feet in the positions shown and secure them with supplied screws (BM4 x 20)

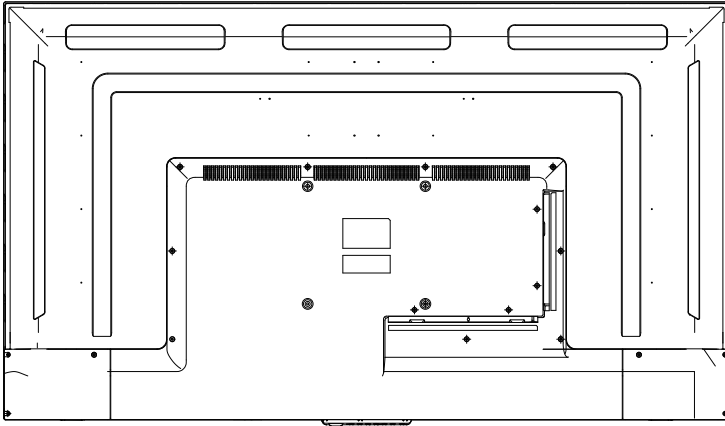


This unit is VESA-Compliant and designed to be wall mounted with a VESA-Compliant 55":200x200mm 65":400x400mm mounting kit.

 Mount this unit according to the instructions of the wall bracket(not supplied)

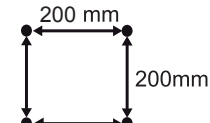



Four mounting holes
Screw size M6 x 10

 55"

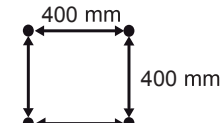

Four mounting holes
Screw size M6 x 10

  58/65"

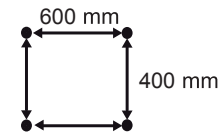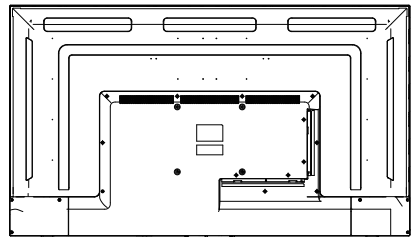

Four mounting holes
Screw size PM8 x 15

75"